



WATERSHED™

BATH PRODUCTS

## Bathtub/Shower Base Only Installation


## ALCOVE PREP

Ensure the alcove is the proper size, square, plumb and clean of dirt/debris.



# STEP 1

Install drain of choice according to manufacturer instructions.

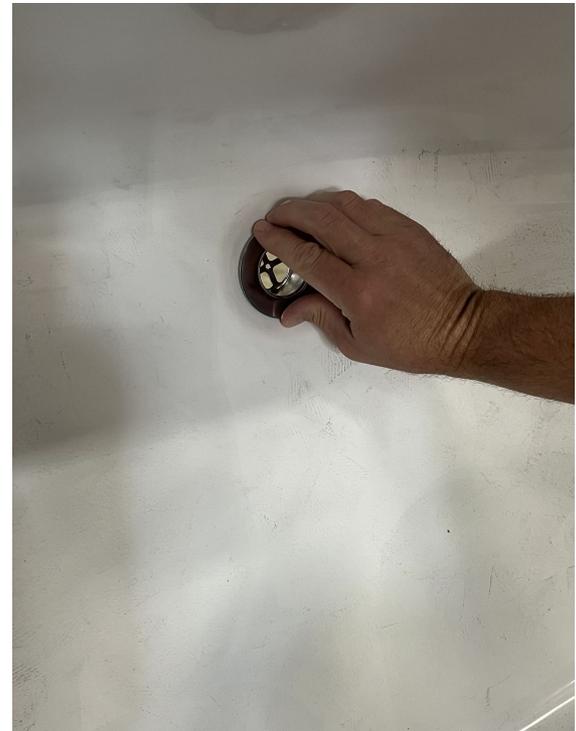


## STEP 2

Position unit into alcove.  
Check for level.  
Adjust/Shim as needed.



## STEP 3

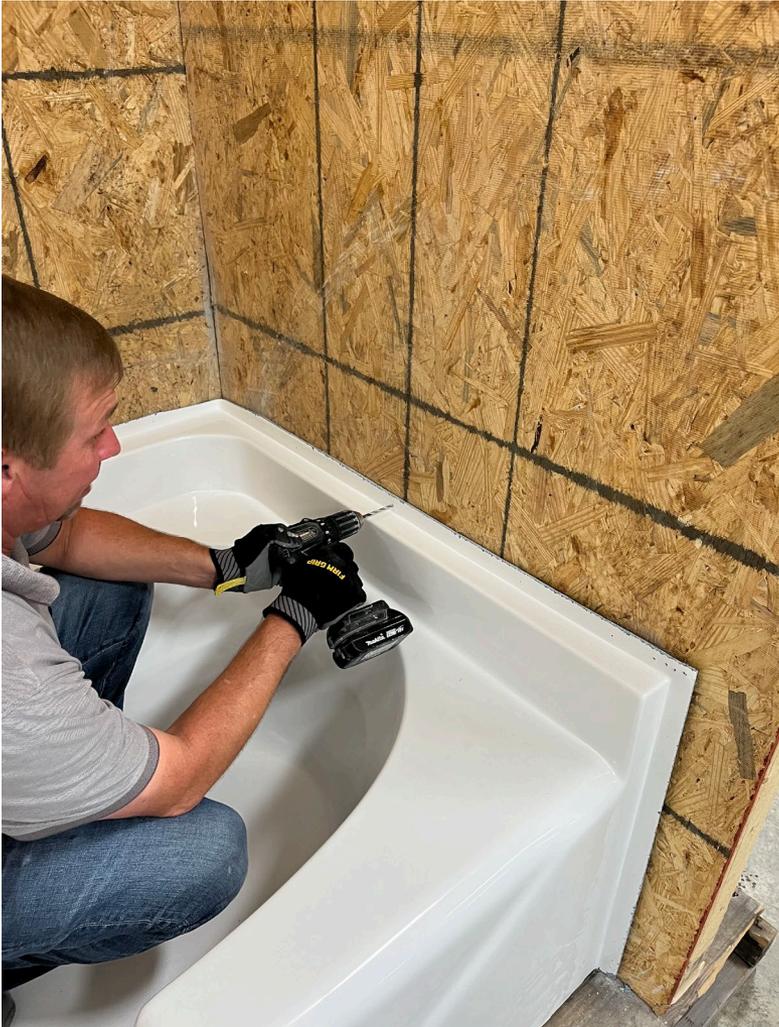

Locate studs and mark.

Pre-drill screw holes through flange at the stud markings.

Side/vertical flange holes should be about 12" apart.

## STEP 4



*No.8 screws recommended*

Install screws along  
entire flange.

# FINISHING TOUCHES

- Install plumbing fixtures
- Complete walls and edging according to homeowner preferences (trim, moulding, tile, wall panels, shower doors, etc.)
- Clean with mild detergent and warm water (no abrasive chemicals or materials)





WATERSHED™  
BATH PRODUCTS

ENJOY!

Visit

[stylecrestinc.com/watershed](https://stylecrestinc.com/watershed)

for more information